

# Epson Projector

## Connecting the projector

- Connect the computer cable to the projector port labeled **Computer/Component Video**.



Computer/Component Video port

- Connect the other end of the cable to the laptop **Monitor port**.
  - Note: The iBook laptops require a special adapter pictured below.




iBook Monitor port

iBook monitor adaptor

- Connect the projector to an outlet.
- Reboot the laptop.

## Projector control panel

- An orange light indicates that the projector is receiving power but has not been turned on.
- To turn the projector on, press the red power button.
  - The light will flash green as the projector warms up.
  - A steady green light means the projector is ready for use.
- Focus the image by turning the lens on the front of the projector.
- Resize the image use the W>>>T button.

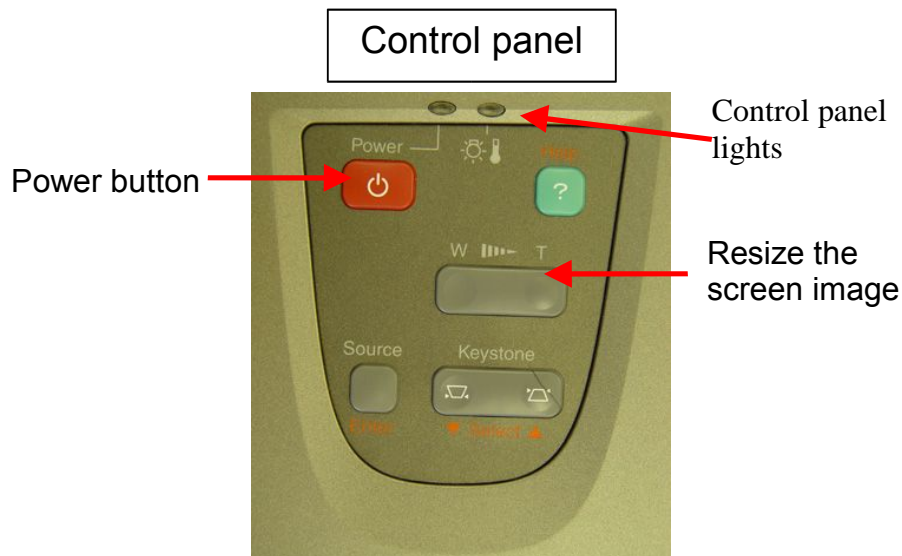

## Changing the display mode.

If you are connecting the projector to a PC laptop, you may need to change the display mode. This determines whether the display shows on the laptop screen, the projector screen or both. You can switch between these three modes easily

- PC – Press the [Fn + F8] keys together and wait a few seconds.
- iBook – cannot change display mode.

## Shutting off the projector

- Shut off the projector by pressing the power button twice.
  - Note: leave the projector plugged in until the fan quits running and the orange light quits flashing.